



BEAMZ
MADE
EAZY

150.573 V1

LSB340 STROBE BAR
QUICK **START GUIDE**


CONTROL MENU

DESCRIPTION		
ADDR	13CH	DMX address setting
	7CH	
STAT	S 01-07	Static colours
AUTO	Au 1-4	Auto program
SOUN	So 1-4	Sound program
SPEE	SP1-9	Speed program
SENS	SE 1-9	Microphone sensitivity
COLO	r000-255	Manual setting Red (0-100%)
	g000-255	Manual setting Green (0-100%)
	b000-255	Manual setting Blue (0-100%)
	U000-255	Manual setting White (0-100%)
DIMM	d11-d1 9	Master dimming
SILE	on/off	Silent scene by Sound program
SLAV	Slave	Slave mode
INFR	on/off	Enable or Disenable IR remote

DMX CHANNELS

13 CHANNELS

CHANNEL	FUNCTION	VALUE	DESCRIPTION
1	Dimmer	000-255	Master dimming (0-100%)
2	Strobe SMD	000-255	SMD Stroboscope (Rate 0-100%)
3	Colour Zone 1	000-255	Red
4		000-255	Green
5		000-255	Blue
6	Colour Zone 2	000-255	Red
7		000-255	Green
8		000-255	Blue
9	Big white LED	000-255	LED Stroboscope (Rate 0-100%)
10		000-255	LED 1 (0-100%)
11		000-255	LED 2 (0-100%)
12		000-255	LED 3 (0-100%)
13	Auto program	000-009	No function
		010-039	Auto program1 (rate)
		040-069	Auto program2 (rate)
		070-099	Auto program3 (rate)
		100-129	Auto program4 (rate)
		130-159	Sound program1 (rate)
		160-189	Sound program2 (rate)
		190-219	Sound program3 (rate)
220-255	Sound program4 (rate)		

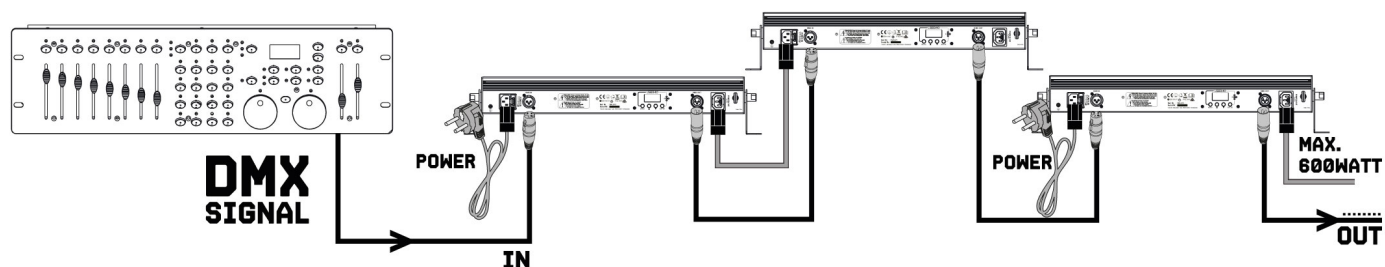

REMOTE CONTROLLER

BLACK OUT MODE

Press **<BLACK OUT>** off existing modes. Press **<BLACK OUT>** return the last modes.

AUTO MODE

Automatic mode will enable you to run the automatic programs on the product.

To turn on Automatic mode:

1. Press **<AUTO>** on the remote controller.
2. Press **<+>** or **<->** to choose between the different auto programs.

SOUND MODE

Sound-Active mode will enable the product to respond to the music.

To turn on Sound-Active mode:

1. Press **<SOUND>** on the remote controller.
2. Press **<+>** or **<->** to choose between the different sound programs.

STROBE MODE

To adjust the strobe speed of the automatic program and the sound active program.

1. Press **<STROBE>** on the remote controller.
2. Press **<+>** or **<->** to either increase or decrease the speed of the program.
3. Press **<STROBE>** again to turn off the strobe.

SPEED MODE

To adjust the speed of the automatic program and the sound active program.

1. Press **<SPEED>** on the remote controller.
2. Press **<+>** or **<->** to either increase or decrease the speed of the program.

SENSITIVITY MODE

To adjust sound sensitivity for in Sound-Active mode

1. Press **<SENSITIVITY>** on the remote controller.
2. Press **<+>** or **<->** to either increase or decrease sound sensitivity.

DMX / % MODE

To enable DMX or disallow DMX on the product.

Press **<DMX>** on the remote controller, the product work on the DMX controlling modes.


MANUAL MODE

1. Press **<MANUAL>** on the remote controller.
2. Press **<R>**, **<G>**, ****, **<W>** (red, green, blue or white) to choose your colour.
3. Press again **<R>**, **<G>**, ****, **<W>** (red, green, blue or white) to close your colour.
4. Press **<+>** or **<->** to either increase or decrease the percentage of each colour.

NUMBER 1~9

To adjust the brightness value of the automatic program, the Sound active program and Manual Mode.

Press digit **<1>** to **<9>** to change different brightness on the device.

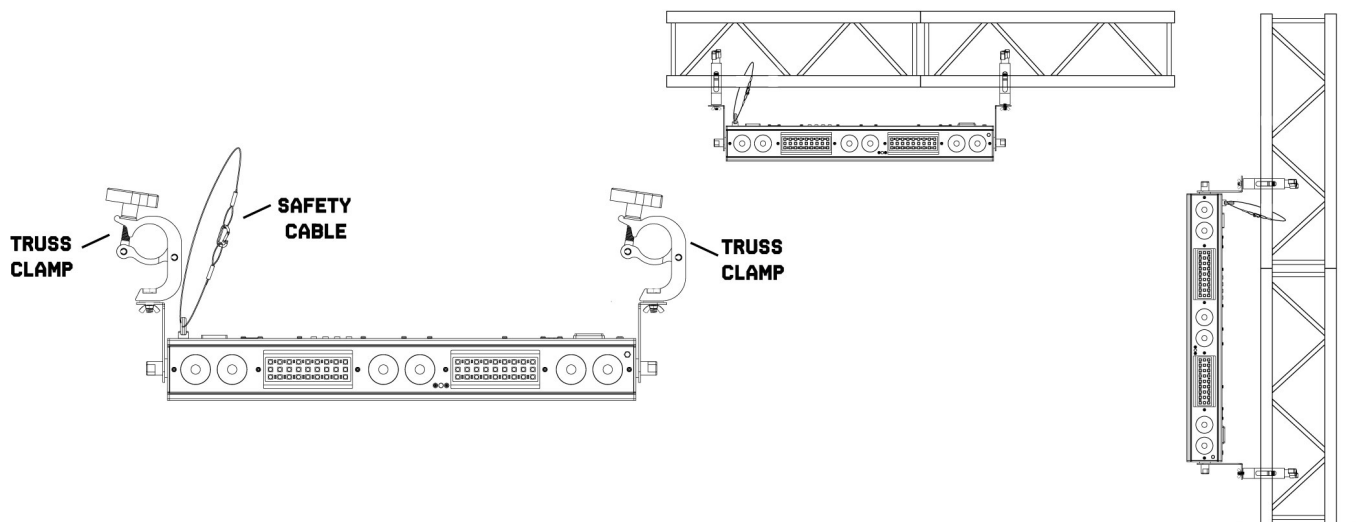



BEAMZ

YOUR FUTURE
YOUR SKILLS
YOUR PLATFORM
YOUR PARTY
YOUR EVENT



is a leading developer of lighting products, including intelligent DMX moving heads, wireless battery operated DMX effects, static washes, sound-activated club effects, strobes & blacklights, LED lighting, fog and special effects machines, lasers and indoor and outdoor architectural lighting, as well as lighting controllers and protective bags.

