


Installation


Control Panel :

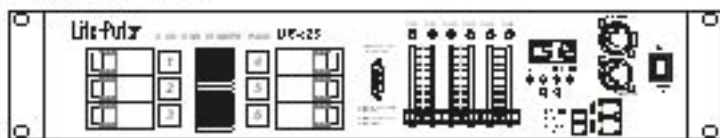



Rear Panel :



Schuko output socket:

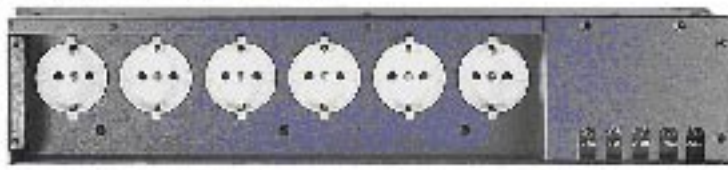

US output socket:

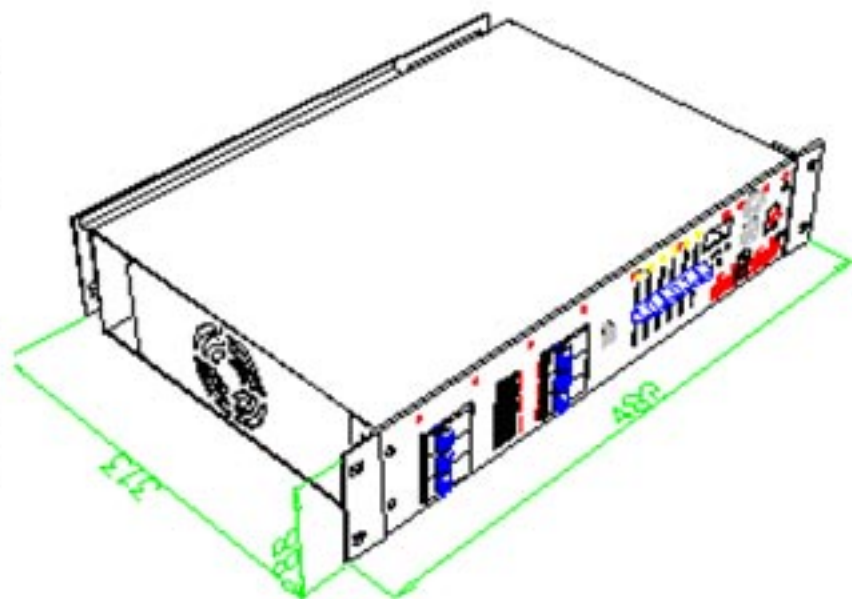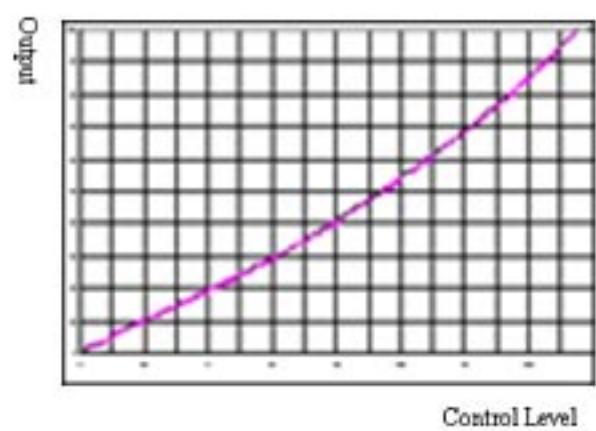

Wiring Diagrams

We suggest using 3-phase-4-wire as a standard method DX-626. It is also the most efficient wiring method. Each DX-626 has to be connected to a 3P 60A main NFB (MCB) for protection. The case of the lanterns must be (grounded) earthed.

